
 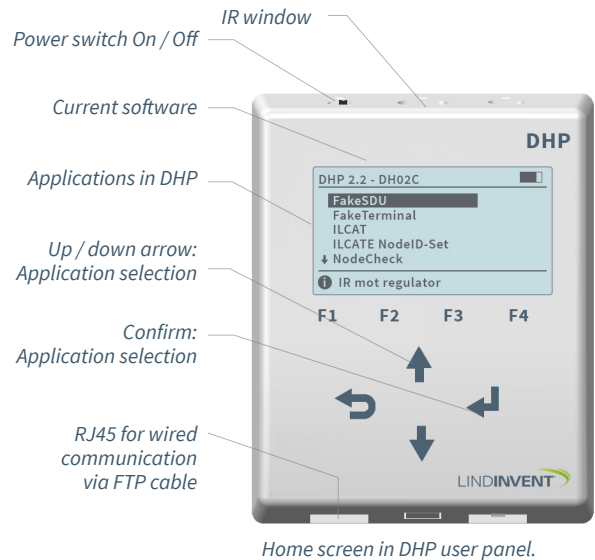


MANUAL SETTINGS

FOR MEASURED VALUES FROM GT-V

- Necessary settings of AIN functions on the connected control unit with parameter settings are reported here.
 - LCX and RCX (Duct-mounted controllers for Lab and room climate)
 - LCR and RCC (Older equivalents of LCX and RCX)
- Mobile application LINDINSIDE is used for logging in to RCXb and LCXb. For guidance, see the commissioning instructions for each control unit.
- The DHP handset is used to log in to:
 - LCX och RCX (Wireless or Wired)
 - LCR och RCC (Wireless or Wired)
- Settings can also be made on all devices via the parent network. See the communication tool LINDINSPECT®.



1. SETTINGS AIN: LCX AND RCX

Login on LCX and RCX:

- Wireless with DHP: Select application FakeSDU.
- Wired with DHP and FTP cable: Select application Serial SDU.
- Login to RCXb and LCXb: Only via LINDINSIDE.

After logging: Go to the menu item "Settings"	
In / Out signals	Function / Value
AIN3	
Feature (Note 1)	Room temperature
Param. 1	12
Param. 2	43

LCX och RCX

Note 1 Selecting functions from a predefined list.
 AIN: <Inaktiv>; <Spjäll>; <Rumstemp>; <Tilluftstemp>; <CO2-givare>...

2. SETTINGS AIN LCR AND RCC

- Login only wired via DHP with FTP and after program selection SDU.

After logging: Go to the menu item "Settings"	
In / Out signals	Function / Value
AIN3	
Feature (Note 1)	Room temperature
Param. 1	12
Param. 2	43

LCXR och RCC

Note 1 Selecting functions from a predefined list.
 AIN: <Inaktiv>; <Väggratt>; <Temp. rum>; <Temp.tilluft>; <CO2-givare>...

3. OTHER CONTROL UNITS FOR ROOM CLIMATE

Control units not mentioned above usually have other equipment for measuring room temperature.

SEE THE NEXT PAGE FOR INSTALLATION INSTRUCTIONS!