



TTC & VTD - ACTIVE SUPPLY AIR DIFFUSER

CBX = Connection box for TTC and VTD
 WTR = Wireless transmitter (Not available)

JP4
 1-2: SL11(8)=NÄRV/PIR*
 2-3: SL11(8)=AIN1

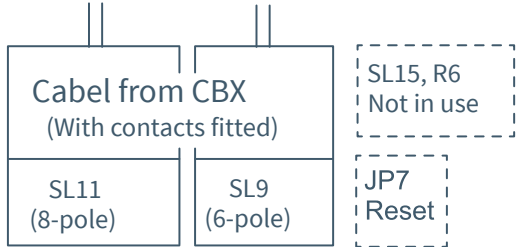

*AIN1/NÄRV: SL(8) is used for either AIN1 or PIR.

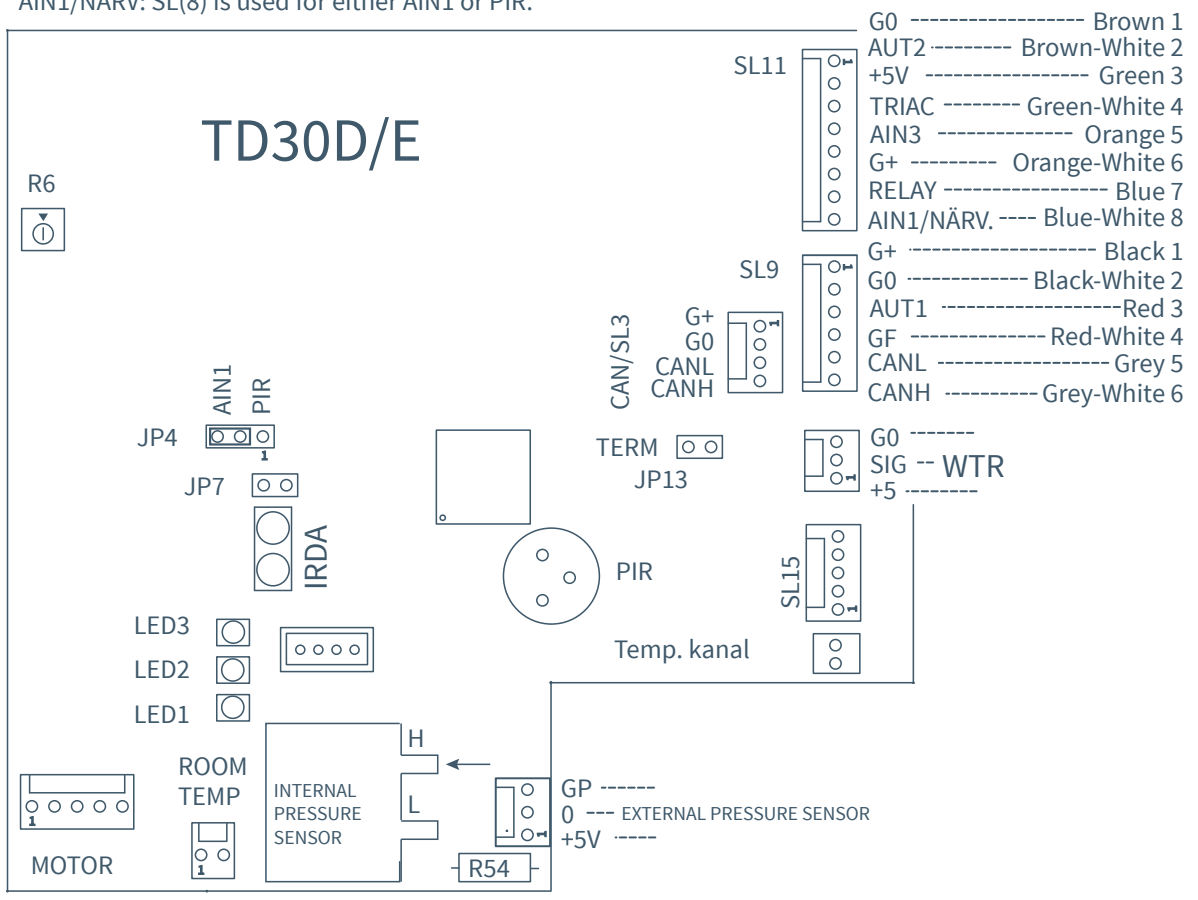

0 ----- Encoder
 +5V ----- +5V
 Motor ----- Motor
 Motor ----- Motor

LED indication
 LED1 (Blue): CAN communication active
 LED2 (Orange): Flashing when TRIAC is active
 LED3 (Green): 5V present

CBX - CONNECTION BOX FOR TTC AND VTD

