


ABOUT THE EQUIPMENT

The DRP displays room temperature or the current value of a selected operating parameter retrieved from the climate control system in a specified part of the building. The panel is configured to interact with a designated control unit or group of control units. Available screen selections with values are set in consultation with the operations manager. In addition to displaying values, the DRP can also be configured with a screen option that allows manual activation of a temporary ventilation function.

FUNCTION AND SCREEN "DISPLAY VALUES"

Below is an example of a screen on the DRP where current temperature and desired temperature are displayed.

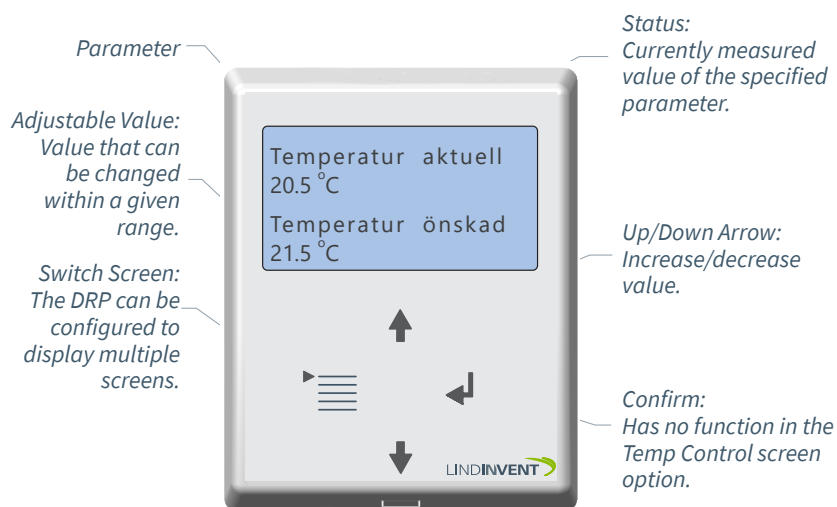

FUNCTION AND SCREEN "VENTILATION"

Example of a screen on the DRP where the ventilation function can be activated. The user can activate the ventilation function by gradually increasing or decreasing the ventilation time. If the time is set to the lowest value, the ventilation function is deactivated.

