

From the connection diagram for RCXb/ LCXb/ BCXb

GTQ-D/-V = Temperature and CO2 sensor

GO-C, XPIR = Occupancy sensor, 5VDC


CBR = Relay box for lightning

PD-2400 = Occupancy sensor, 24VAC

RCXb = Room climate controller (DCV-RCb)

LCXb = Lab climate controller (DCV-LCb)

BCXb = Climate baffle controller

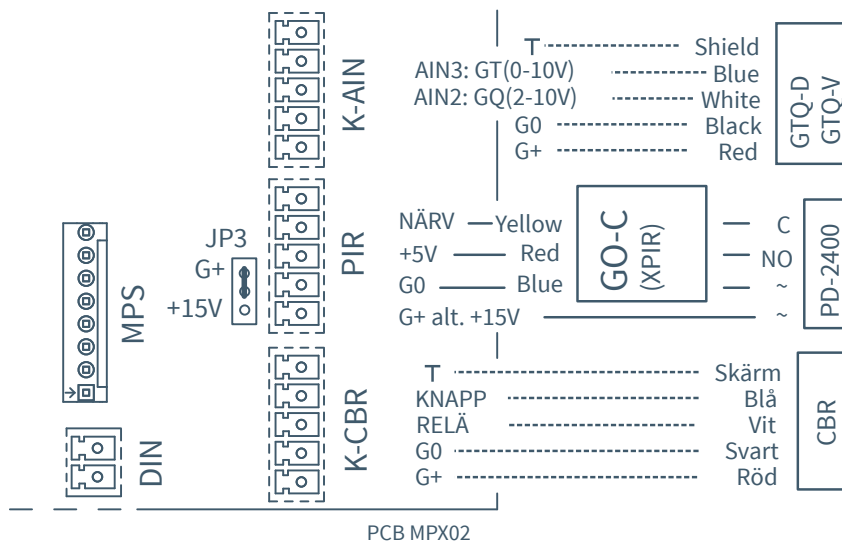

Connection box CBD for ISQ-160, ISQ-200, ISQ-F, ISQ-V

CBR = Relay box for lightning

A4x405 = Valve actuator, 24VAC (On/Off)

GS-C = Sound level sensor

GO-C, XPIR = Occupancy sensor, 5V

ISQ-160/ -200/ -F = Roof mounted active diffuser

ISQ-V = Wall mounted active diffuser

