

\* Signal GT is not switched on. Active supply air diffusers are equipped with sensors for room temperature.

\*\* Distinguish between phase (G + / 24VAC) and zero (G0 / 0): Common zero for 24VAC and signals.

RCX / RCX-B = Room climate controller  
 LCX / LCX-B = Lab Climate Regulator  
 CBX = Junction box TTC, VTD  
 CBD = Junction box ISQ, ISQ-F, ISQ-S  
 DCV-RC / DCV-RCb = Room climate control  
 DCV-LC / DCV-LCb = Lab climate control

