

* Signal GT is not switched on. Active supply air diffusers are equipped with sensors for room temperature.

** Distinguish between phase (G + / 24VAC) and zero (G0 / 0): Common zero for 24VAC and signals.

RCXb = Room climate controller
 LCXb = Lab climate controller
 CBX = Connection box TTC, VTD
 CBD = Connection box ISQ/ISQ-F/ISQ-V2/ICI
 DCV-RCb = Room climate control unit
 DCV-LCb = Lab climate control unit

